

Lincoln Navigator Window Reset:

This is for when a door glass replacement is done or regulator.

De-Initialization Procedure:

1. Start with the ignition key in the RUN position and open the front door.
2. **NOTE:** Steps 2 and 3 must be performed within 8 seconds.
Turn the ignition key from OFF to RUN 5 times.
(If it is a push button start do 15 times in the ON position)
3. Press the window control switch to the one-touch DOWN position (second detent) and release.

****UNPLUG MOTOR****

Window Motor Initialization:

4. Start with the ignition key in the OFF position and with the LF/RF door open.
5. Turn the ignition key to the ON position.
6. Activate and hold the window control switch in the one-touch DOWN position (second detent) until the window glass stalls for 2 seconds at the bottom of its travel and release the switch.
7. **NOTE:** After performing this step, wait a minimum of 3 seconds before operating the window control switch or ignition switch.
Activate and hold the window control switch (with no interruptions) in the one-touch UP position (second detent) until the window glass stalls for 2 seconds into the glass top run and release the switch.
8. Verify correct operation of the window by carrying out the one-touch up and one-touch down features. If the window does not operate correctly, carefully repeat this procedure.